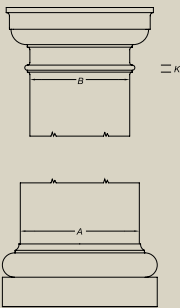


12 DuraCast™ Round Barrel Full Length Columns

Measurements in inches unless otherwise noted.

	Size	Bottom Shaft Diameter A	Neck Shaft Diameter B	Middle Shaft Diameter	Bead K	Load-Bearing Capacity* (in lbs.)	Minimum Wall Thickness	Length (in feet)
	Plain							
	10"	9 3/16	10 1/8	12	1	10,000	1 3/8	8, 10

*Load-bearing capacity is dependent on the concentric loading of the column. Eccentric (non-centered) load-bearing capacity available upon request.
 Note: 2nd story balconies should not be attached directly to the side of any column, contact Dixie-Pacific™ for recommendations.

Plan Types for Splitting DuraCast™ Columns

