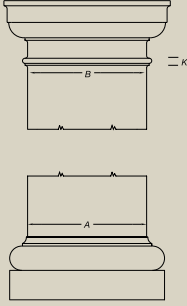


8 DuraCast™ Round Non-Tapered Full Length Columns


Measurements in inches unless otherwise noted.

	Size	Bottom Shaft Diameter A	Neck Shaft Diameter B	Bead K	Load-Bearing Capacity* (in lbs.)	Min. Wall Thickness	Length (in feet)
	Plain						
	8"	7 5/8	7 5/8	1	10,000	3/8	6, 8, 9, 10
	10"	9 5/8	9 5/8	1	14,000	3/8	6, 8, 9, 10
	12"	11 5/8	11 5/8	1	18,000	3/8	6, 8, 9, 10, 12
	14"	13 5/8	13 5/8	1 1/8	20,000	1/2	6, 8, 9, 10, 12
	16"	15 5/8	15 5/8	1 3/8	20,000	1/2	6, 8, 9, 10, 12, 14, 16, 18, 20
	18"	17 5/8	17 5/8	1 3/8	20,000	1/2	6, 8, 9, 10, 12, 14, 16, 18, 20
	20"	20	20	1 5/8	20,000	1/2	6, 8, 9, 10, 12
	24"	24	24	1 3/4	20,000	5/8	6, 8, 9, 10, 12, 14, 16, 18, 20

*Load-bearing capacity is dependent on the concentric loading of the column. Eccentric (non-centered) load-bearing capacity available upon request.
Note: 2nd story balconies should not be attached directly to the side of any column, contact Dixie-Pacific™ for recommendations.

9 DuraCast™ Round Non-Tapered Knee-Wall Columns

Measurements in inches unless otherwise noted.

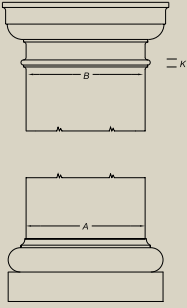	Size	Bottom Shaft Diameter A	Neck Shaft Diameter B	Bead K	Load-Bearing Capacity* (in lbs.)	Minimum Wall Thickness	Length (in feet)
	Plain						
	8"	7 5/8	7 5/8	1	10,000	3/8	Up to 6
	10"	9 5/8	9 5/8	1	14,000	3/8	Up to 6
	12"	11 5/8	11 5/8	1	18,000	3/8	Up to 6
	14"	13 5/8	13 5/8	1 1/8	20,000	1/2	Up to 6
	16"	15 5/8	15 5/8	1 3/8	20,000	1/2	Up to 6
	18"	17 5/8	17 5/8	1 3/8	20,000	1/2	Up to 6
	20"	20	20	1 5/8	20,000	1/2	Up to 6
	24"	24	24	1 3/4	20,000	5/8	Up to 6

*Load-bearing capacity is dependent on the concentric loading of the column. Eccentric (non-centered) load-bearing capacity available upon request.
Note: 2nd story balconies should not be attached directly to the side of any column, contact Dixie-Pacific™ for recommendations.

Plan Types for Splitting DuraCast™ Columns

