

- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles

#### **Easy Installation**

- Complete Kit, with Fasteners & Adhesive
- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation

### **Virtually Maintenance Free**

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints


**Prestige Soffit Panels™** are an improved soffit system that allows for maximum airflow.


Our vented soffit has an 8/4 repeating pattern that provides 10 square inches of free air space per lineal foot.

Our innovative nature allowed for another solution for a quick and easy installation.



# www.prestigediy.com

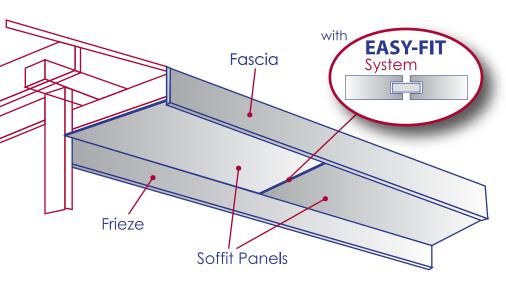


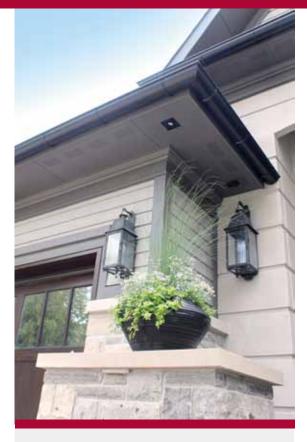

## **Available Panels**



### Vented Panel



## Standard Measurements for **Prestige Soffit Panels™**

Panel Thickness: 1/2"

Panel Widths: 12", 16" & 24"

Panel Lengths: 48"

PVC Spline: 3/8" x 1"

# Transition Corner Panel



PVC Panel Spline Bar

**Note:** Our vented soffit has an 8/4 repeating patter to provide 10 Sq. in. for free air space per lin. ft.

### What Makes the Prestige Soffit Panels Different?

- Standard 12", 16" and 24" widths, 4' lengths
- Architectural accent joints located at 4' intervals
- Easy- Fit system installs without the need for joint finishing
- Easy, quick installation
- Made from premium 1/2" PVC
- Transition Corner Panels allow for easy installation
- Custom radius options available
- Available in natural white or painted to match