


Assembly & Installation Instructions

Congratulations on your purchase of your new Prestige Gable™ Detail. These gables are designed to bring a classical architectural design to your home, and are engineered for easy installation. Before you begin your install, please take a few moments to unpack and review the contents of your package. Each Gable Detail will be installed behind the fascia board. You will need different fasteners depending on the application.

Note: The below installation instructions are suggested practices only. Fastener length may vary depending on product purchased. Ensure for 1" penetration into wood structure.

Materials Included:

- One (1) gable post with mounting block
- Two (2) gable stretchers
- Four (4), #8, 3" galvanized wood screws
- Three (3) screws per side of stretcher

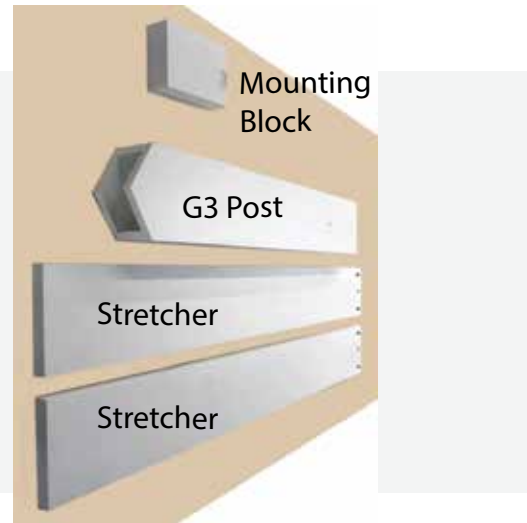

Note: Gable Detail shown is 6"(5.5" actual) size. 4"(3.5" actual) is also available

Gable Detail: Assembly



- On a clean flat surface, layout the gable detail parts.
- Using spacers to adjust the depth, place the two gable stretchers at the desired height from the bottom of the gable post or line up with pre marked holes.

It is recommended not to exceed 4" from the bottom of gable post.

- Using the #8 galvanized wood screws provided, toe screw the stretcher to the middle gable post. The holes are pre drilled for easy assembly.



- Fasten both stretchers to either side of the gable post.



Gable Detail: Installation Instructions

- Once the gable detail is assembled, remove the mounting block positioned in the gable post.



REMOVE TEMPORARY
HOLDER

- Using the four (4) 3" #8 galvanized wood screws provided, fasten the mounting block to the top gable peak sub-fascia.

***** Best method is to screw two (2) from back of fascia and two (2) from the front.*****



- Once mounting block is secured, with stretchers attached, slide gable post over block and fasten to the mounting block using four (4) 2" #8 galvanized wood screws. (Fasteners not included)



- Once gable post has been fastened to the mounting block, level post before fastening stretchers to sub fascia.



- By screwing two (2) screws into both the front and back, you securely lock the gable into place both ways.



Congratulations, your Prestige Gable is now completely installed and ready to enjoy. While not required, your gable can be painted.

Prestige diy
PRODUCTS

Innovative PVC Systems

www.prestigedi.com