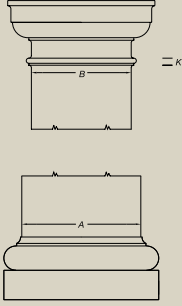


15 DuraCast™ Square Tapered Full Length Columns


Measurements in inches unless otherwise noted.

	Size	Bottom Shaft Width A	Neck Shaft Width B	Bead K	Load-Bearing Capacity* (in lbs.)	Minimum Wall Thickness	Length (in feet)
	Plain						
	10 1/4"	10 1/4	7 1/2	1 1/8	10,000	1 3/8	7
	12"	12	10	11/16	10,000	1 3/8	10
	14"	14	12	7/8	10,000	1 3/8	9

*Load-bearing capacity is dependent on the concentric loading of the column. Eccentric (non-centered) load-bearing capacity available upon request.
Note: 2nd story balconies should not be attached directly to the side of any column, contact Dixie-Pacific™ for recommendations.

16 DuraCast™ Square Tapered Knee-Wall Columns

Measurements in inches unless otherwise noted.

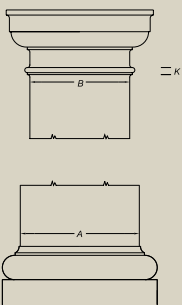	Size	Bottom Shaft Width A	Neck Shaft Width B	Bead K	Load-Bearing Capacity* (in lbs.)	Min. Wall Thickness	Length (in feet)
	Plain						
	9"	8 3/4	7 1/2	1 1/8	5,000	1 3/8	3' 10"
	10"	10	6 1/4	11/16	10,000	1 3/8	5' 6"
	10 1/4"	10 1/4	7 1/2	1 1/8	10,000	1 3/8	6
	16"	16	9 1/2	1 1/8	10,000	1 3/8	5

*Load-bearing capacity is dependent on the concentric loading of the column. Eccentric (non-centered) load-bearing capacity available upon request.
Note: 2nd story balconies should not be attached directly to the side of any column, contact Dixie-Pacific™ for recommendations.

Plan Types for Splitting DuraCast™ Columns

